

Kyun-Seop Bae, Sungpil Han

R Programming - Lecture Notes



R

PROGRAMMING

KYUN-SEOP BAE
SUNGPIIL HAN

Contents



List of Tables



List of Figures



Preface

안녕하십니까?

2017년 1학기 울산대학교 의학과 대학원 수업 R Programming 과목 담당교수 배균섭입니다.

R은 <http://cran.r-project.org> 에서 다운로드받아 설치할 수 있습니다. 역시 같은 사이트에서 Manual이 나와 있으니 참고하시기 바랍니다. 구글에서 'R Programming pdf'와 같은 키워드로 검색하시면 많은 자료를 보실 수 있습니다.

첨부한 R.stx¹ 파일은 AcroEdit이라는 editor에서 사용할 syntax highlighting용 구문 파일입니다. <http://www.acrosoft.pe.kr> 에서 다운로드 받아 설치하시기 바랍니다. AcroEdit대신 notepad++를 선호하시는 분은 그대로 사용하셔도 됩니다.

저는 RStudio, tinnR 등을 이용해서 강의하지 않습니다만, 필요하신 분은 쓰셔도 괜찮습니다. 향후 R package 작성을 위해서는 MiKTeX와 Rtools를 설치하십시오.

추가로 말씀드리자면, <http://www.coursera.org> 에 많은 R 강좌가 개설되어 있습니다. Specialization course로 들어가면 유료이지만, (Specialization course는 여러 개의 과목이 합쳐져 있는 것입니다.) 개별 과목을 검색해서 들어가면, 무료로도 볼 수 있습니다. (대신 시험을 칠 수 없거나, certificate를 받을 수 없습니다.)

좋은 강좌가 많으니 많이 활용하시기 바랍니다.

강의 장소에 불편함이 많은 것으로 생각되어, 다음과 같이 Skype 모임을 개설하였습니다. 사정상 원거리에서 오시기 불편한 분들은 활용하시기 바랍니다. 출석은 화면을 캡처하거나 휴대폰으로 찍은 뒤 sec@acp.kr², shan@acp.kr³ 보내주시면 출석으로 인정해 드립니다.

Skype 모임 참가 <https://meet.lync.com/uucp-acp/ksbae/SKGJ3BNQ>

2017년 3월, 배균섭 배상

¹<https://groups.google.com/a/acp.kr/group/r/attach/409db97bf453a/R.stx?part=0.1&authuser=0>

²<mailto:sec@acp.kr>

³<mailto:shan@acp.kr>

The online version of this book is licensed under the Creative Commons Attribution-NonCommercial-ShareAlike 4.0 International License⁴.



FIGURE 1: Creative Commons License

Teaching Assistant

안녕하십니까? 서울아산병원 임상약리학과 전공의 한성필입니다. 수업과 관련된 여러 제반 업무를 담당하고 있습니다. 언제든지 의문사항 있으면 r@acr.kr⁵로 전체 메일 보내시거나 교수님 k@acr.kr⁶ 혹은 제 개인 메일 shan@acr.kr⁷로 연락해 주십시오.

교수님께서 세우신 방침에 따라 수업시간에 출석을 부르지 않을 예정입니다. 수강하시는 화면 (Skype)을 휴대폰으로 사진 찍으시거나 강의실의 스크린을 사진으로 촬영하셔서 sec@acr.kr⁸ / shan@acr.kr⁹로 동시에 보내주시면 됩니다. 가급적 “2017-03-31 한성필 출석”과 같은 식의 제목을 유지해 주시면 처리하는데 큰 도움이 될 것 같습니다.

출석 체크를 위해 전체메일을 사용하지 말아주십시오!

아울러 수업 중에 사용한 코드/스크립트를 사용하여 R의 패키지인 bookdown을 사용해 웹북을 제작 중에 있습니다. (?) 여러분이 읽고 있는 이 책 자체가 R 코드의 일종인 Rmarkdown의 결과물이라고 보시면 됩니다. Github 저장소¹⁰가 있으니 소스 코드를 보실 수 있습니다. 누구나 소스를 편집하여 Pull Request를 요청할 수 있으므로 혹시 Github를 사용하셔서 웹북의 질을 높이고자 하시는 수강생 선생님들께서는 도움을 주십시오.

감사합니다.

2017년 3월, 한성필 올림

⁴<http://creativecommons.org/licenses/by-nc-sa/4.0/>

⁵<mailto:r@acr.kr>

⁶<mailto:k@acr.kr>

⁷<mailto:shan@acr.kr>

⁸<mailto:sec@acr.kr>

⁹<mailto:shan@acr.kr>

¹⁰<https://github.com/asancpt/Rprogramming>

FAQ

접속 관련

Q. 스카이프를 한번도 안써봐서 이참에 사용법을 배우고있는데, 수업시작 시에 상대방을 어떻게 검색해서 들어가면 될지 알려주시면 감사하겠습니다.

Q. 온라인 수강시 접속하는 스카이프 주소는 무엇인지요?

<https://meet.lync.com/uucp-acp/ksbae/SKGJ3BNQ>

Chrome 등 웹브라우저에서 위 주소를 입력하면 직접 대화방으로 연결됩니다. (검색할 필요 없습니다.) 처음 설치시에는 Add-on이 설치될 수 있습니다. MacOS Sierra, Win7, Win10에서 Chrome, Internet Explorer 등을 사용하여 테스트해 보았고 모두 잘 동작하였습니다. 대부분의 경우 Skype For Business 계정이 없을 것으로 생각되는데 따로 로그인할 필요 없습니다.

수업 시작 30분 전부터 대화방을 개설해 놓도록 하겠습니다.

https://groups.google.com/a/acr.kr/d/msg/r/nUkrE37W2kQ/waG-FkM_BgAJ 교수님께서 처음 보낸 메일을 참고해 주십시오.

Q. 앞으로 수업은 지난 첫수업처럼 계속 온라인 수강이 가능한 것인가요?

네, 계속 온라인으로 가능합니다.

Q. 저도 웹캠을 설치하여야 하여야 하나요?

설치할 필요 없습니다. 오히려 수강자의 웹캠의 전원을 꺼두시길 권고드립니다.

Q. 수강전 온라인 강의 테스트 해볼 수 있나요?

수업 시작 30분 전부터 대화방을 개설하여 놓도록 하겠습니다.

출석관련

Q. 미국학회 참석으로 수업시간이 귀국행 비행기 기내에 있을거같아 출석이 안될것 같습니다. 방법이 있을까요?

결석 사유서를 제출해 주시면 출석 처리 하겠습니다. 대학원 홈페이지 참고 바랍니다.¹¹ 이 링크로 들어가시면 가장 위에 있습니다. (결석사유서.hwp) 참고로 수업 영상은 녹화하여 Youtube에 비공개 링크를 만들 예정이라서 추후에 관련 영상을 시청할 수 있을 것 같습니다. 결석사유서를 제출한다고 100% 출석이 인정되는 것은 아닙니다. 이것이 기본적으로는 offline강의이기 때문에 강의시간에 강의실에 있든지, 또는 온라인으로 접속해 있어야 합니다. 출석사유서를 제출하거나, 추후 동영상 시청을 해서 그 증거(사진)을 제출하는 경우에 감점을 줄어드릴 수 있습니다. 예를 들어, 결석시에는 2점 감점인데, 결석사유서를 제출하면 1점만 감점한다는지, 동영상을 보면 0.5점만 감점한다는지 하는 것입니다. 결석 사유서 제출 시 출석 처리 원칙에 대한 설명을 드리오니, 참고하시길 바랍니다.

¹¹ <http://www.medulsan.ac.kr/graduate/?mid=72&curpage=files>

과제 관련

Q. 과제가 있다고 들었는데 언제 assign 하게 되는지요?

과제는 빨라야 5주차 이후에 나옵니다.

Coursera 관련

Q. 첫 수업 때, certification 관련 말씀을 하셨는데, 정확히 coursera 사이트에서 어떤 것을 듣고, 제출을 해야하는지 궁금합니다. (비슷한 내용이 많아, 어떤것을 들어야하는지 헷갈립니다.)

Coursera는 꼭 어느 것을 들어야 하는 것은 아니고, R programming과 관련된 것이라면 자유로이 골라서 들으면 됩니다. 대표적인 두 가지만 들자면 다음과 같습니다.

- <https://www.coursera.org/learn/r-programming>
 - <https://www.coursera.org/learn/r-programming-environment>
-

Q. Coursera 강의를 듣고 증명서를 내면 출석을 얼마나 커버할 수 있을런지요?

Coursera는 출석 커버보다는 grade를 올려 주기 위한 것입니다. 출석은 Skype로 커버해야 합니다. 출석의 성적 반영비율은 25%이지만, 규정상 4회 이상 결석이면 성적이 나갈 수 없습니다.



1

Graphics

2017-03-22 임형석 교수님 강의

R을 사용해 그림 그리는 방법에 대해 알아보겠습니다.

1.1 Introduction

- 상위수준 그림 함수는 그림을 생성한다.
 - 하위수준 그림 함수는 기존의 그림에 그림을 추가한다.
-

1.2 상위수준 그림 함수

1.2.1 상위수준 그림 함수의 주요 인자 (arguments)

- main : 제목
- xlab/ylab : x축 및 y축 레이블
- xlim/ylim : x축 및 y축 범위
- col : 색깔
- lty : 선 모양
- pch : 점 모양
- cex : 그림 성분의 크기

- lwd: 선 굵기
- type: 그림 타입

```
dta <- read.csv("PK.csv")
head(dta)
```


```
##   ID TIME AMT   DV MDV
## 1  1 0.00  0  0.00  0
## 2  1 0.00  4  0.00  1
## 3  1 0.33  0  9.40  0
## 4  1 0.66  0 13.71  0
## 5  1 1.00  0 16.52  0
## 6  1 1.50  0 29.36  0
```

```
str(dta)
```

```
## 'data.frame':   456 obs. of  5 variables:
##  $ ID   : num  1 1 1 1 1 1 1 1 1 1 ...
##  $ TIME: num  0 0 0.33 0.66 1 1.5 2 3 4 6 ...
##  $ AMT  : num  0 4 0 0 0 0 0 0 0 0 ...
##  $ DV   : num  0 0 9.4 13.7 16.5 ...
##  $ MDV  : num  0 1 0 0 0 0 0 0 0 0 ...
```


1.2.2 scatter plot

```
plot(dta$TIME[dta$MDV==0], dta$DV[dta$MDV==0])
```

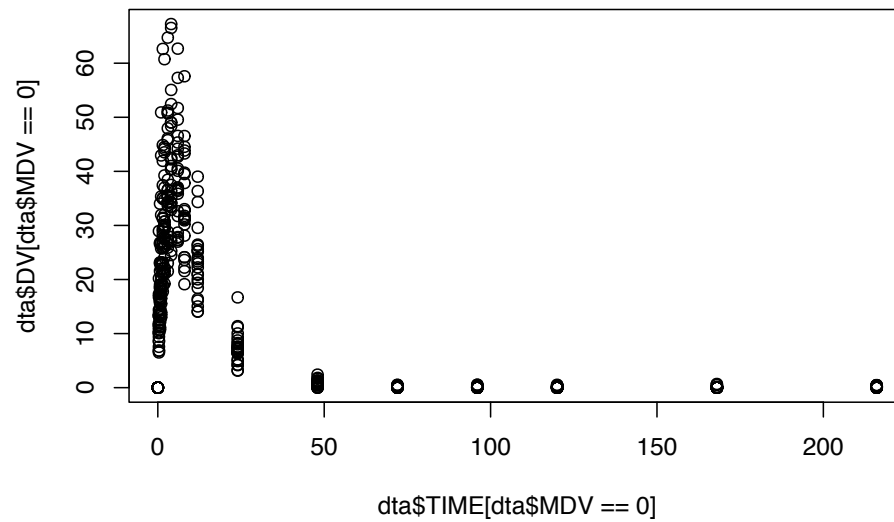



```
plot(dta$TIME[dta$MDV==0], dta$DV[dta$MDV==0], log="y")
```

```
## Warning in xy.coords(x, y, xlabel, ylabel, log): 86 y
## values <= 0 omitted from logarithmic plot
```

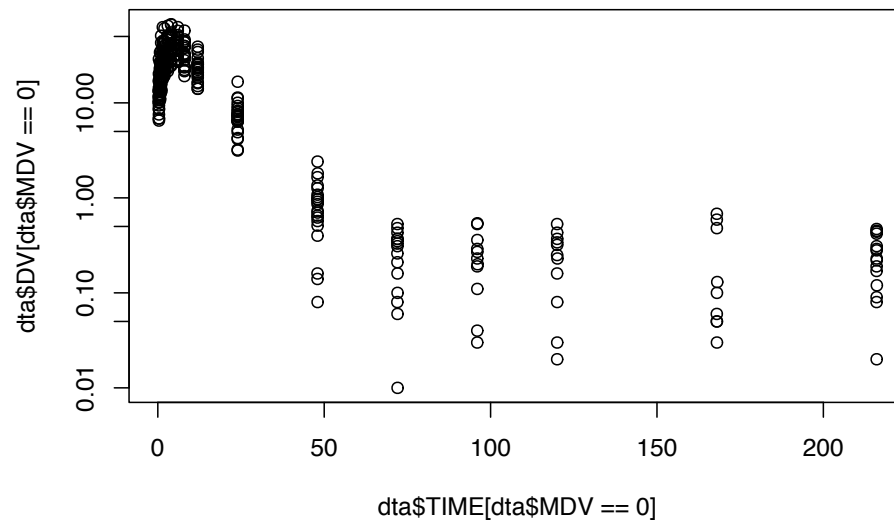


```
plot(dta$TIME[dta$MDV==0], log(dta$DV[dta$MDV==0]))
```

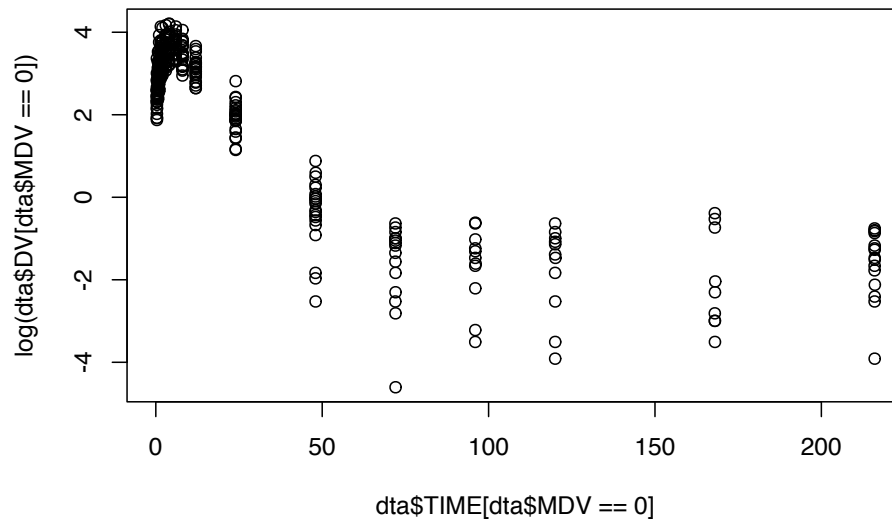


```
plot(dta$TIME[dta$MDV==0], dta$DV[dta$MDV==0],
     , xlab="Time (hr)", ylab="Concentration (ng/mL)"
     , type="o", pch=2, col=1, main="PK time-course of Drug X"
     , xlim =c(-2,218), ylim=c(0,80))
```

PK time-course of Drug X

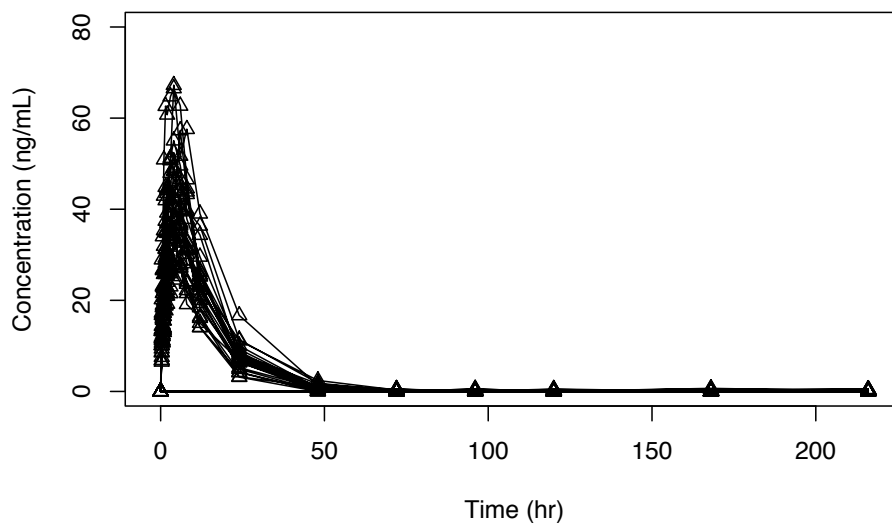


```
plot(dta$TIME[dta$MDV==0], dta$DV[dta$MDV==0], axes=F,  
     , xlab="Time (hr)", ylab="Concentration (ng/mL)"  
     , type="o", pch=2, col=1, main="PK time-course of Drug X"  
     , xlim =c(-2,218), ylim=c(0,80))  
axis(1, at=seq(0, 218, 24))  
axis(2)  
box()
```

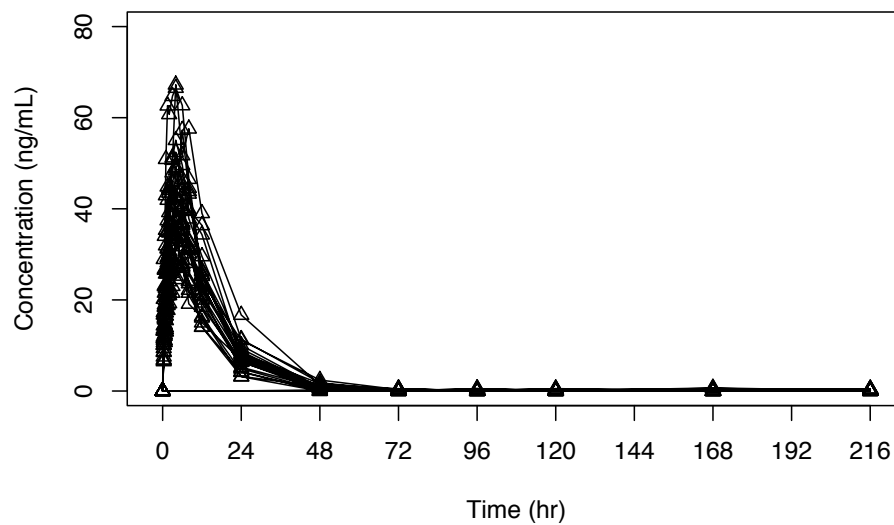
PK time-course of Drug X

1.2.3 Histogram

```
d.demog <- read.csv("DEMOG.csv")  
  
hist(d.demog$HT)
```

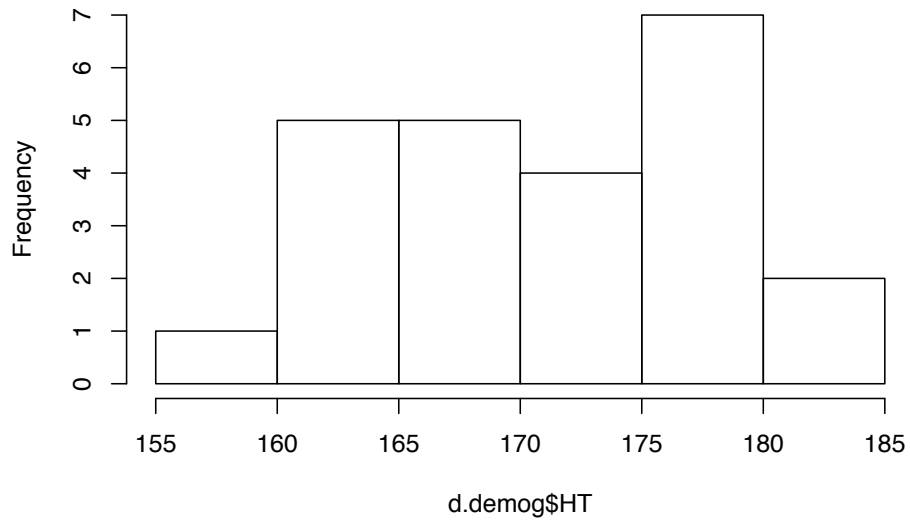
Histogram of d.demog\$HT

```
hist(d.demog$HT, breaks=10)  
hist(d.demog$HT, nclass=10)
```

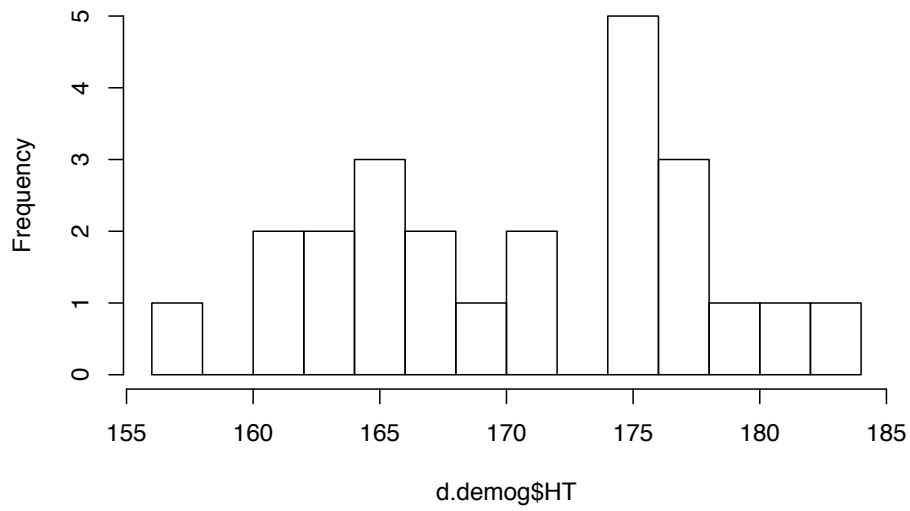Histogram of d.demog\$HT


1.2.3.1 with density line

```
hist(d.demog$HT, probability=TRUE, breaks=10)  
lines(density(d.demog$HT))
```

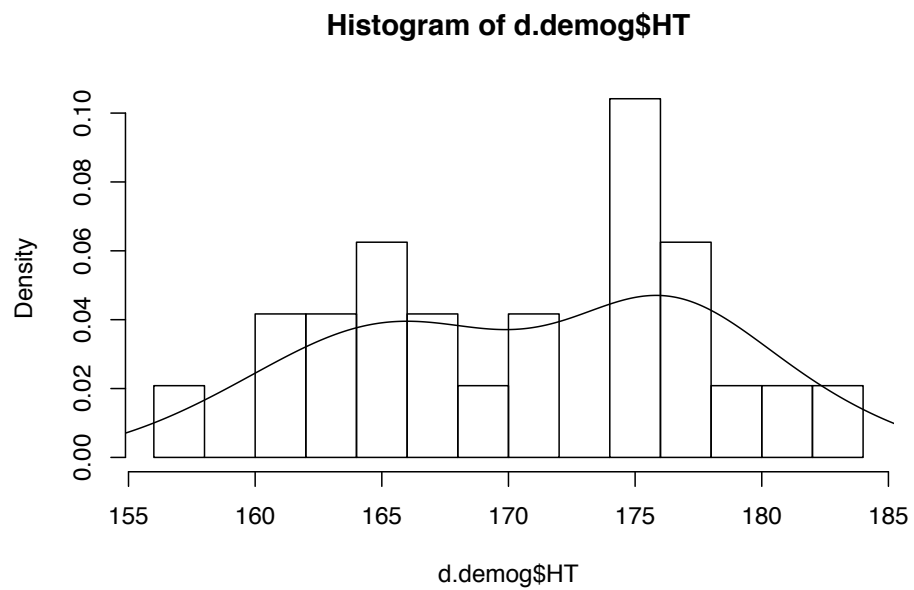


```
hist(d.demog$HT, probability=TRUE, breaks=9, xaxt="n"  
      , main="Histogram for Height", xlab="Height (cm)", ylab="Probability (%)")  
axis(1, at=seq(min(d.demog$HT), max(d.demog$HT), 3))  
lines(density(d.demog$HT))
```

Histogram for Height

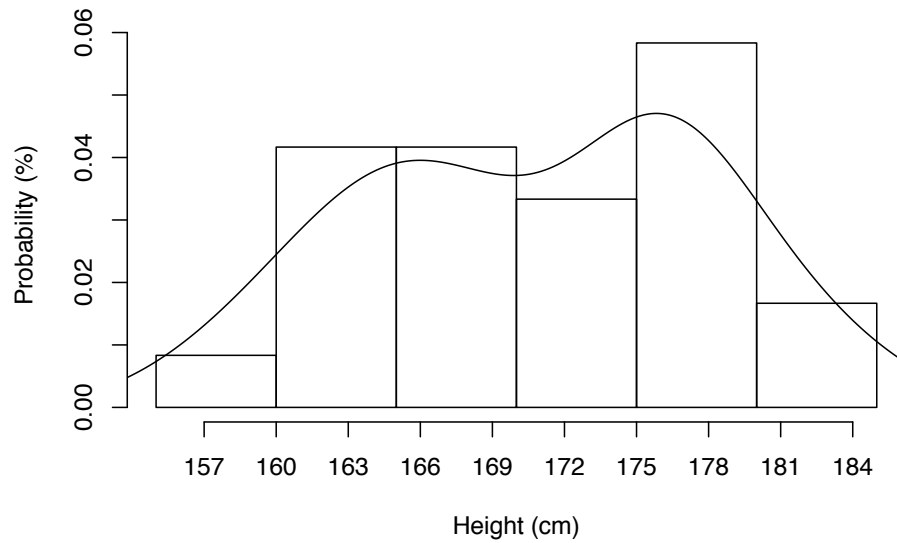


```
hist(d.demog$HT, probability=TRUE, breaks=9, xaxt="n",
     , main="Histogram for Height", xlab="Height (cm)", ylab="Probability (%)",
     , col = "lightblue", border = "pink")
axis(1, at=seq(min(d.demog$HT), max(d.demog$HT), 3))
lines(density(d.demog$HT))
```

Histogram for Height

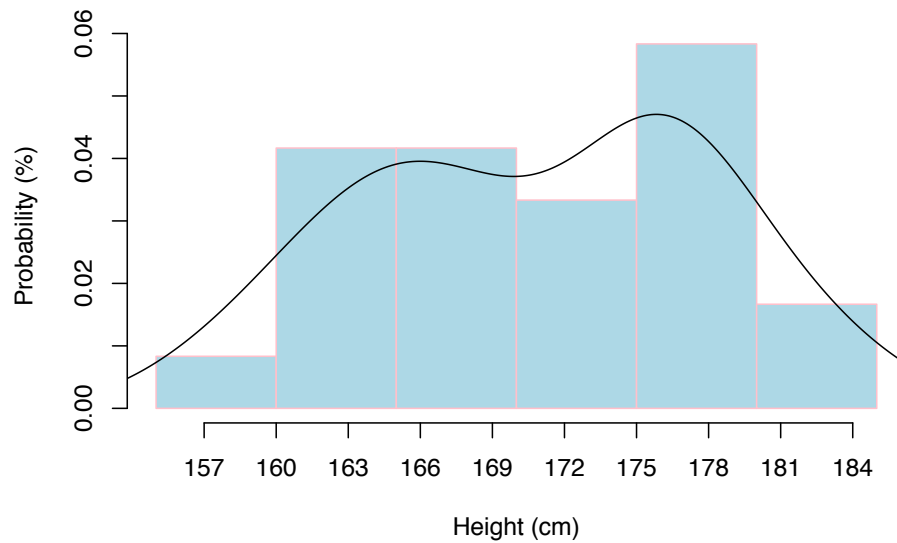


1.2.4 Box-Whisker Plot

```
boxplot(d.demog$WT)
```

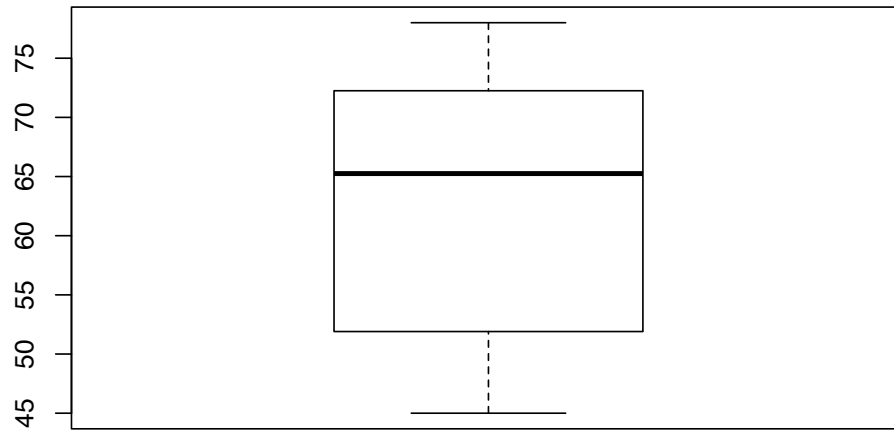

```
boxplot(d.demog$WT ~ d.demog$SEX)
```


```
boxplot(split(d.demog$WT, d.demog$SEX))
```

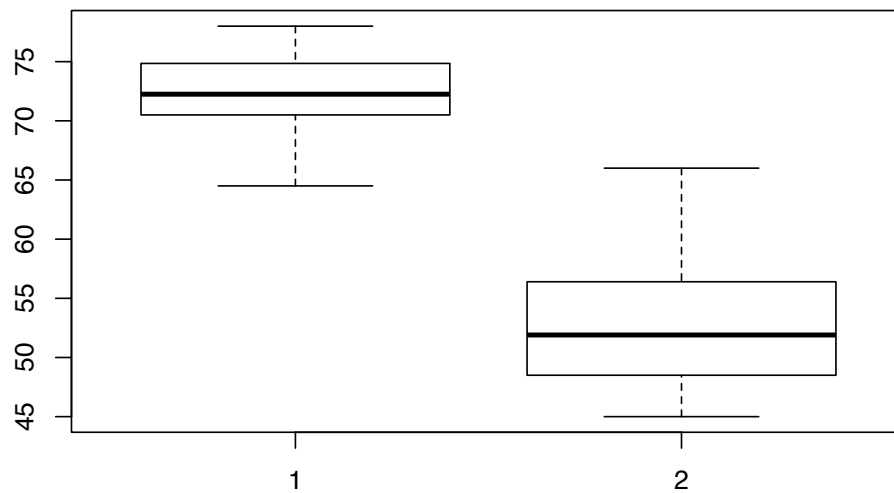


```
boxplot(WT ~ SEX, data=d.demog)
```

```
boxplot(d.demog$WT ~ d.demog$SEX)
```

```
, names=c("Male", "Female"), ylab="AGE, year", ylim=c(min(d.demog$WT)-2, max(d.demog$WT)+2)
, col="pink")
```

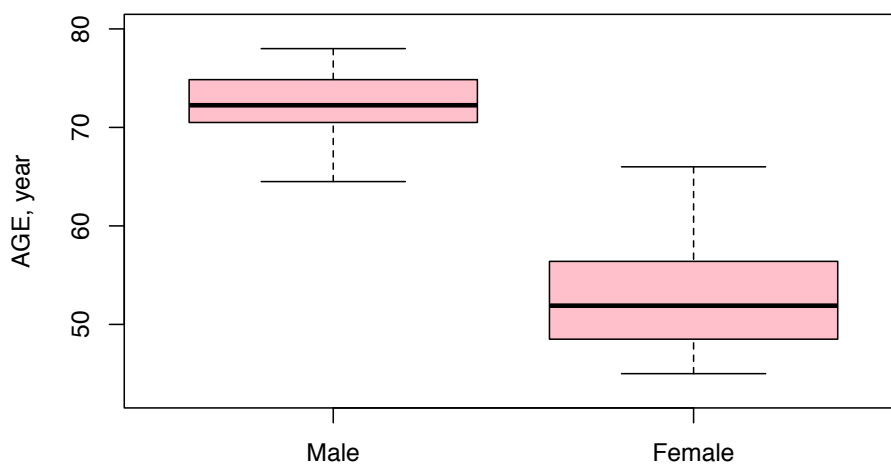

```
boxplot(d.demog$WT ~ d.demog$SEX
, names=c("Male", "Female"), ylab="AGE, year", ylim=c(min(d.demog$WT)-2, max(d.demog$WT)+2)
, col=c("lightblue", "salmon"), width=c(0.6, 1))
```

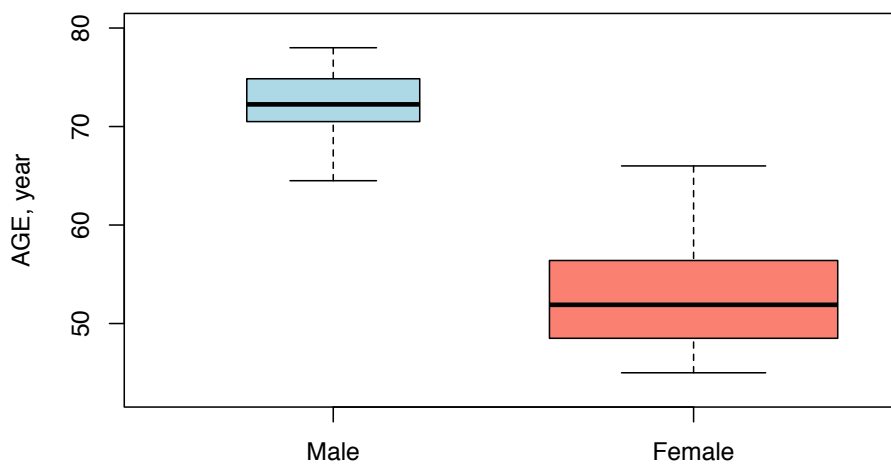


-varwidth: if varwidth is TRUE, the boxes are drawn with widths proportional to the square-roots of the number of observations in the groups.

```
boxplot(d.demog$WT ~ d.demog$SEX
, names=c("Male", "Female"), ylab="AGE, year", ylim=c(min(d.demog$WT)-2, max(d.demog$WT)+2)
```




```
, col=c("lightblue", "salmon")
, varwidth=TRUE)
```

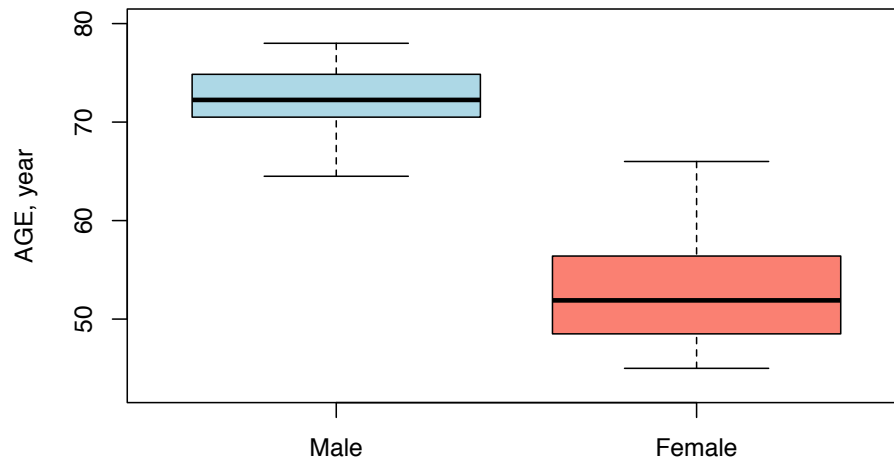

1.2.5 Bar Plot

```
barplot(d.demog$HT)
```

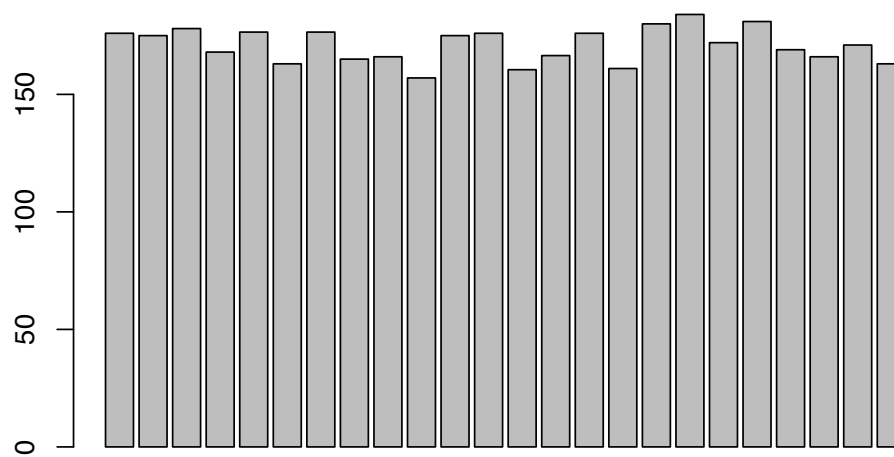


VADeaths


```
## Rural Male Rural Female Urban Male Urban Female
```

## 50-54	11.7	8.7	15.4	8.4
## 55-59	18.1	11.7	24.3	13.6
## 60-64	26.9	20.3	37.0	19.3
## 65-69	41.0	30.9	54.6	35.1
## 70-74	66.0	54.3	71.1	50.0


```
barplot(VADeaths, border = "dark blue")
```

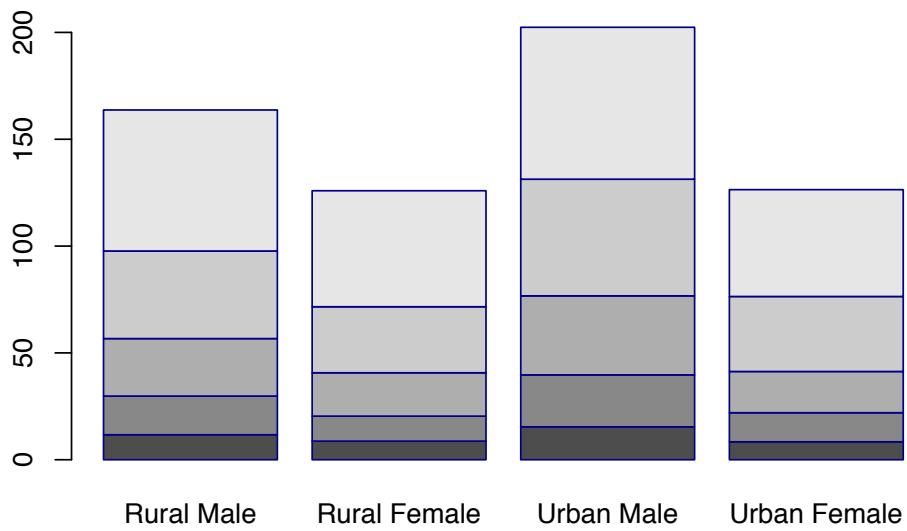


```
barplot(VADeaths, col = rainbow(20))
```

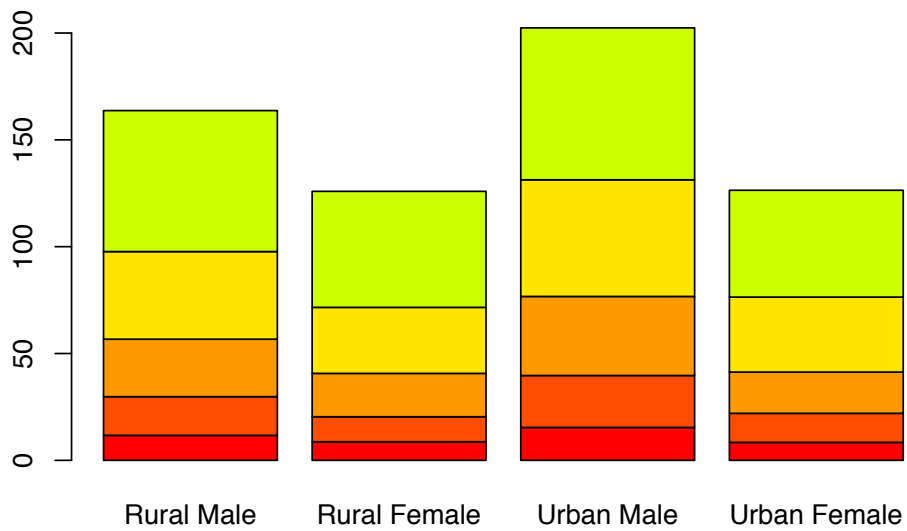


```
barplot(VADeaths, col = heat.colors(8))
```

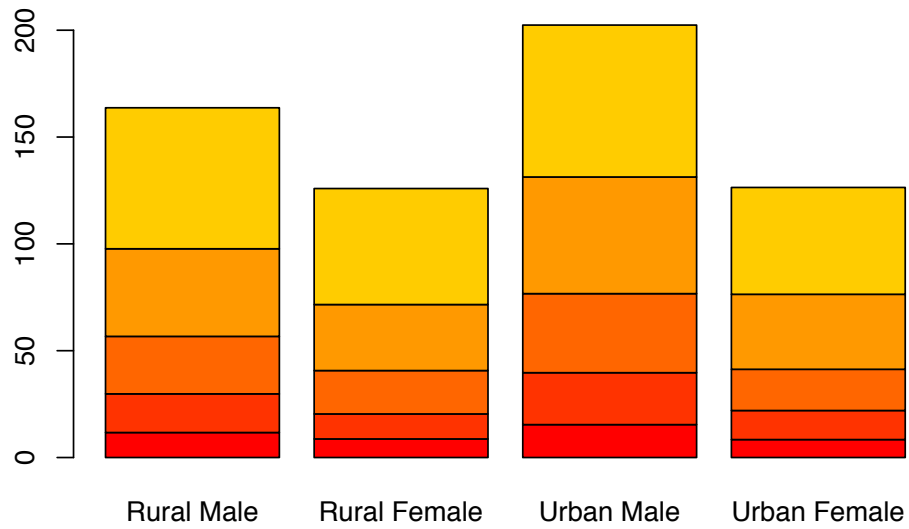

```
barplot(VADeaths, col = gray.colors(4))
```

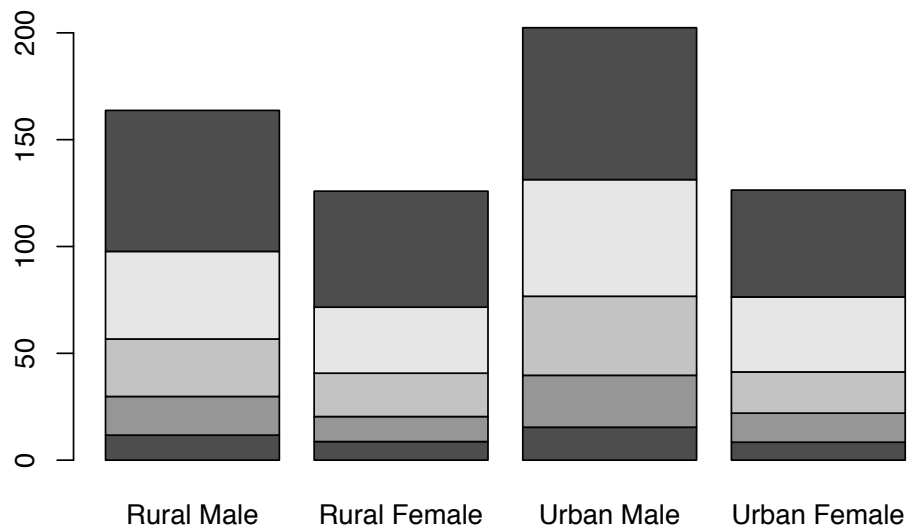


```
barplot(VADeaths, col = gray.colors(4), log="x")
```

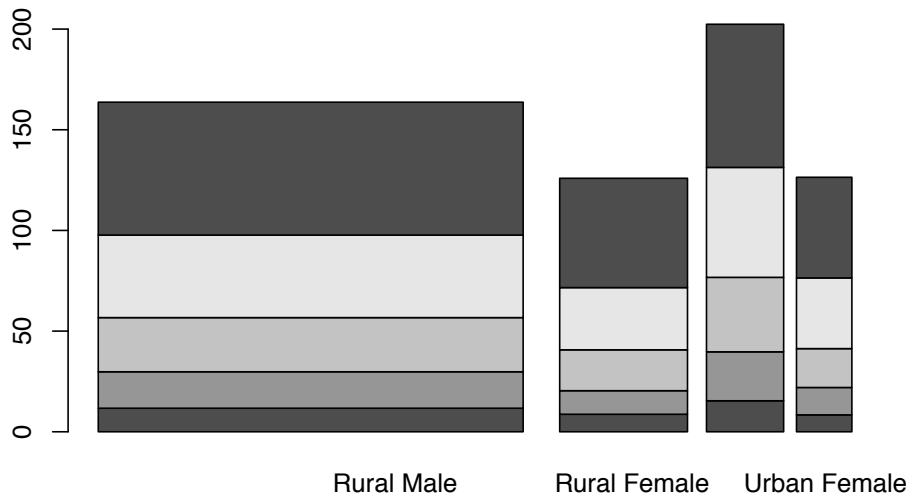

```
barplot(VADeaths, col = gray.colors(4), log="y")
```




```
barplot(VADeaths, col = gray.colors(4), log="xy")
```

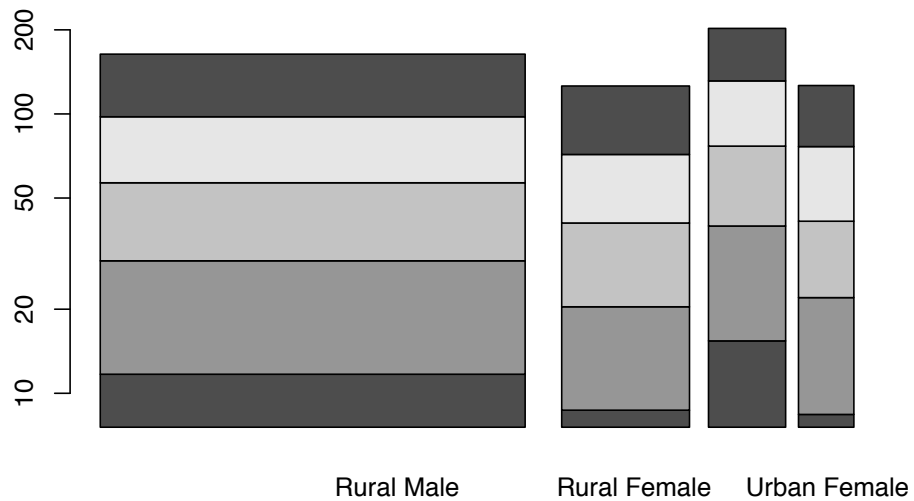

1.2.6 pie chart


```
drug.X.market <- c(0.12, 0.29, 0.32, 0.22, 0.11, 0.28)
names(drug.X.market) <- c("South Korea", "China", "USA", "Japan", "Austria", "EU")
pie(drug.X.market)
```

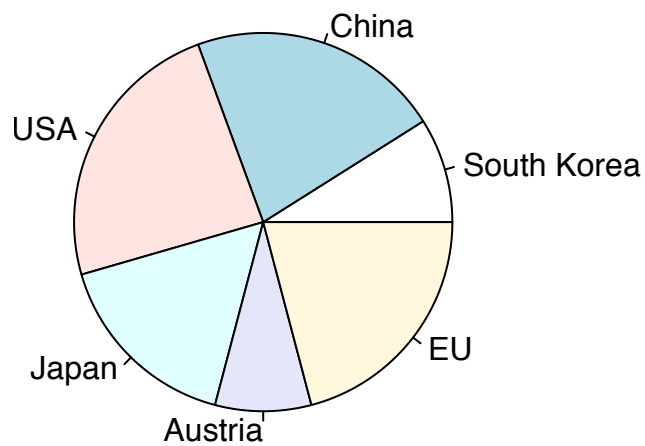


1.2.7 matplot 함수

1.2.7.1 matrix와 column 사이의 그림

```
pct.95 <- read.csv("pct95.csv")
matplot(pct.95[,1], pct.95[,2:ncol(pct.95)], pch=1)
```

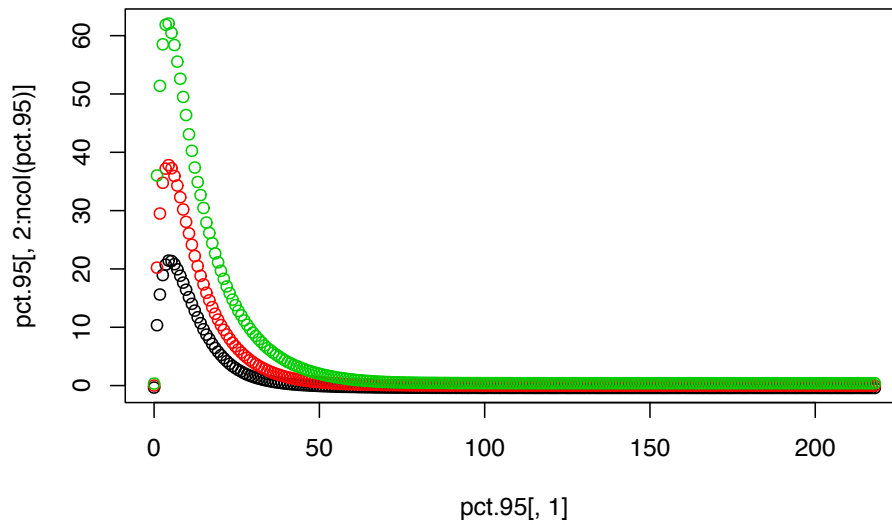


```
matplot(pct.95[,1], pct.95[,2:ncol(pct.95)], pch=1, col=c(1,2,1), type="l", lty=1, lwd=c(1,2,1))
```

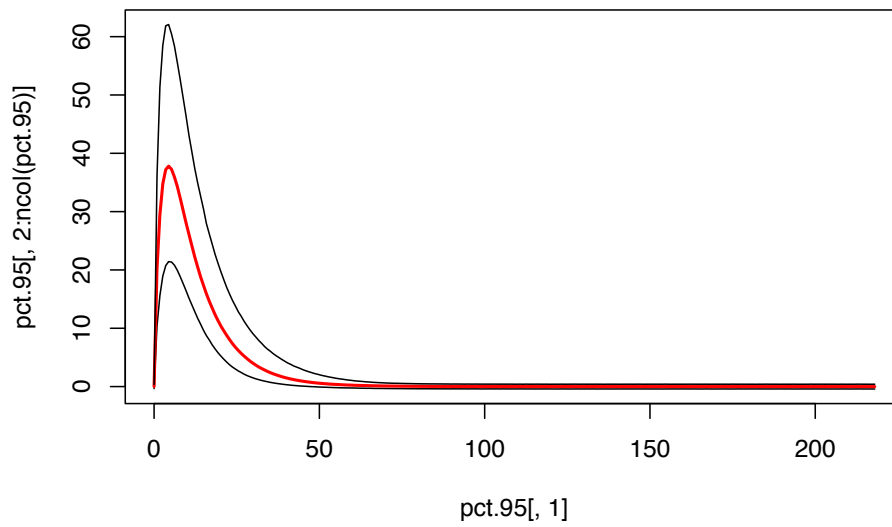


1.2.8 Scatter plot matrices (pairs plots)

```
pairs(d.demog)
```

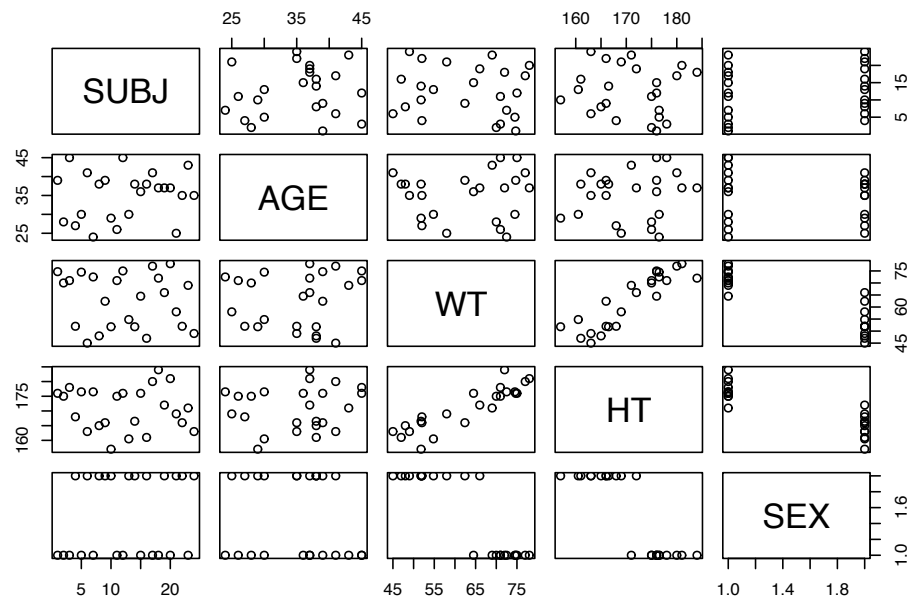


1.2.8.1 add a loess smoother, type

```
pairs(d.demog, panel = panel.smooth)
```

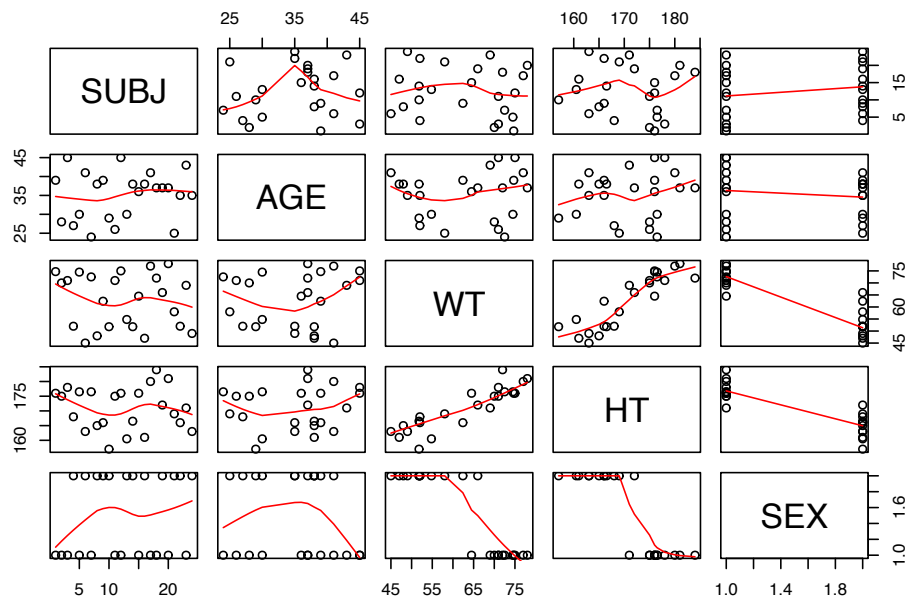

```
panel.cor <- function(x, y, digits=2, prefix="", cex.cor)
{
  usr <- par("usr"); on.exit(par(usr))
  par(usr = c(0, 1, 0, 1))
  r = (cor(x, y))
  txt <- format(c(r, 0.123456789), digits=digits)[1]
  txt <- paste(prefix, txt, sep="")
  if(missing(cex.cor)) cex <- 1.5
  text(0.5, 0.5, txt, cex = 1.5)
}

pairs(d.demog, lower.panel=panel.smooth, upper.panel=panel.cor)
```

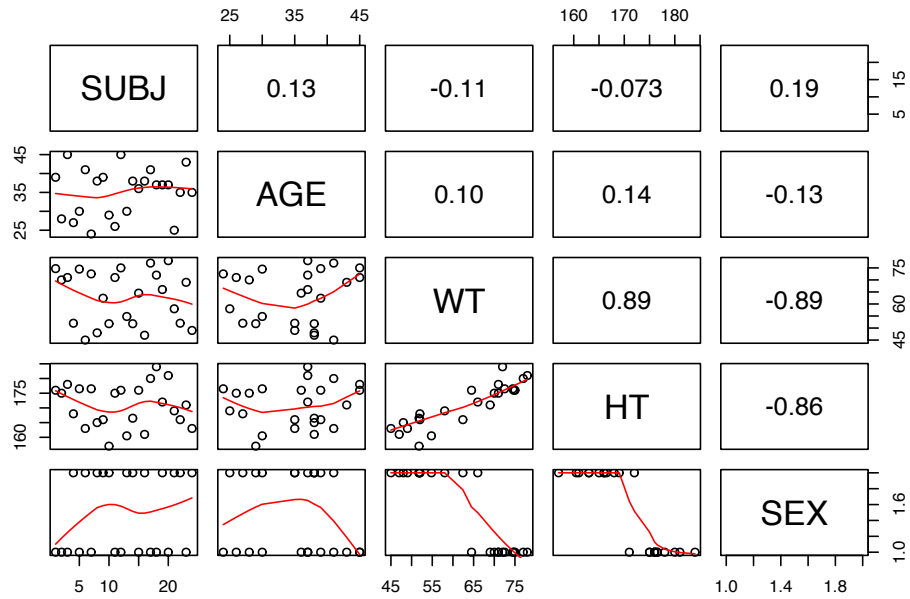
1.3 하위수준 그림 함수

- points : 점 추가
- lines : 선 추가
- abline : 기준선 추가
- mtext : 텍스트 추가
- legend : 설명 (legend) 추가
- polygon : polygon 추가

1.3.1 점, 선, 설명 추가 하기 {add}


```
plot(pct.95$TIME, pct.95$PCT50, main="PK of Drug X"
     , type="l", xlab="Time (h)", ylab="Concentration (ng/ml)"
     , ylim=range(0,80), lty=1, col="red", lwd=2)
```

PK of Drug X

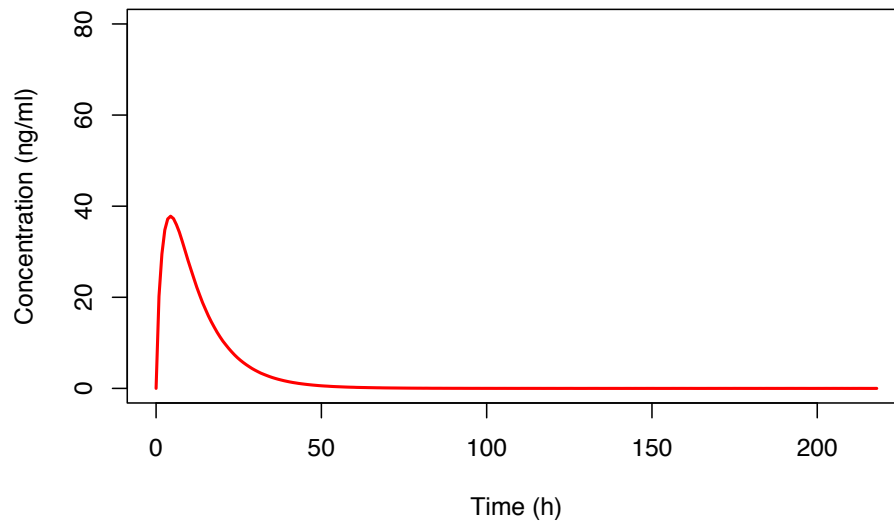


```
plot(dta$TIME[dta$MDV==0], dta$DV[dta$MDV==0], main="PK of Drug X"
     , type="n", xlab="Time (h)", ylab="Concentration (ng/ml)"
     , ylim=range(0,80))
points(dta$TIME[dta$MDV==0], dta$DV[dta$MDV==0], pch = 16, cex=0.8)
lines(dta$TIME[dta$MDV==0], dta$DV[dta$MDV==0], col="black", lwd=1)
abline(40, 0, col="red", lty=2) # abline(a,b): y=a+b*x
legend("topright", legend=c("Individual concentrations")
      , lty=1, col="black")
```

PK of Drug X

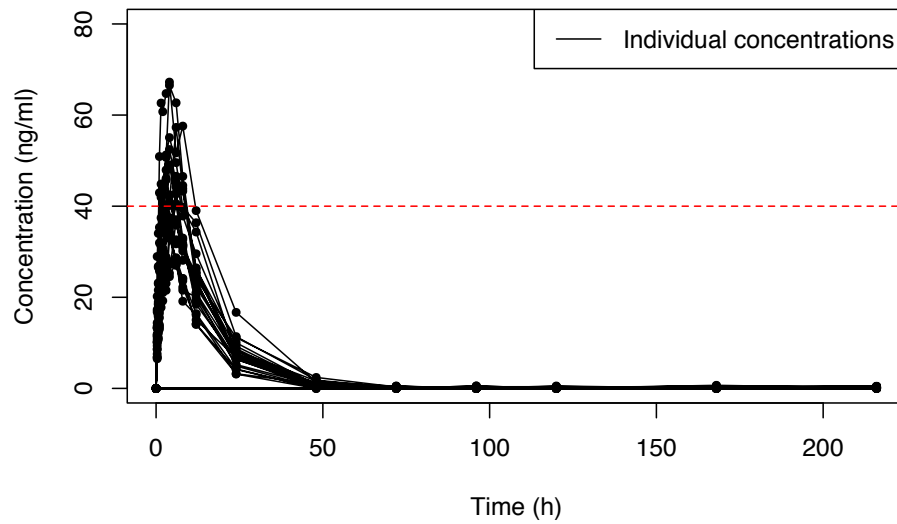


1.3.2 polygon 함수

```
plot(c(1, 10), c(1, 6), type = "n")
polygon(c(2,8,8,2), c(5,4,3,2), col="lightgreen")
```

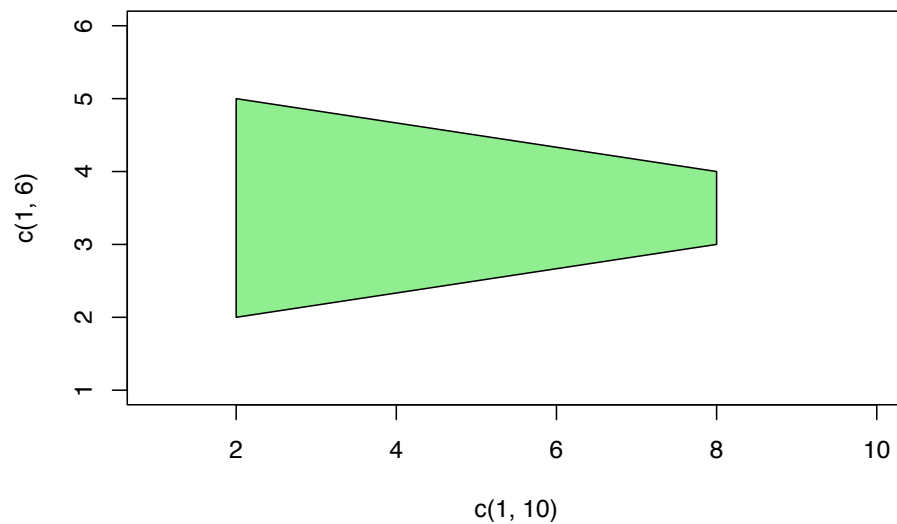

```
plot(c(1, 9), 1:2, type = "n")
polygon(1:9, c(2,1,2,1,1,2,1,2,1),
       col = c("red", "blue"),
       border = c("green", "yellow"),
       lwd = 3, lty = c("dashed", "solid"))
```

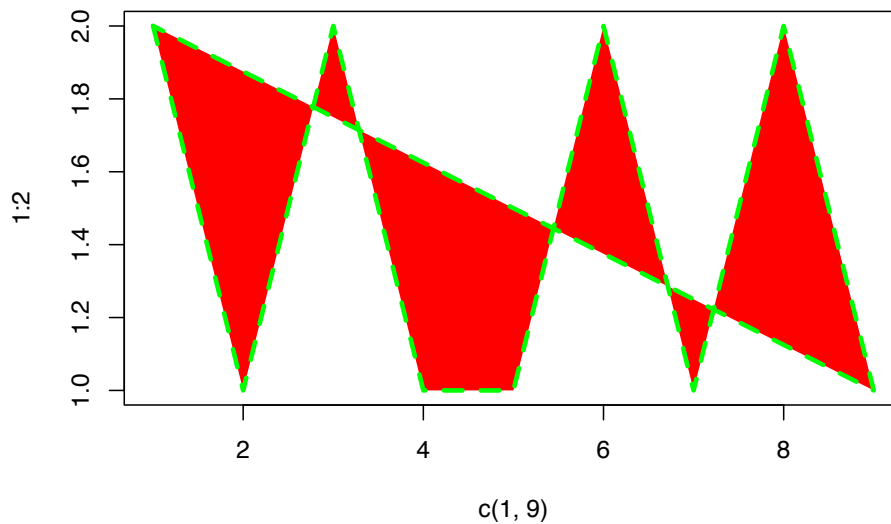

1.4 그림 출력하기

1.4.1 pdf graphics devices

```
pdf("PK_of_Drug_X.pdf")

plot(dta$TIME[dta$MDV==0], dta$DV[dta$MDV==0], main="PK of Drug X"
     , type="n", xlab="Time (h)", ylab="Concentration (ng/ml)"
     , ylim=range(0,80))
points(dta$TIME[dta$MDV==0], dta$DV[dta$MDV==0], pch = 16, cex=0.8)
lines(dta$TIME[dta$MDV==0], dta$DV[dta$MDV==0], col="black", lwd=1)
abline(40, 0, col="red", lty=2) #abline(a,b): y=a+b*x
legend("topright", legend=c("Individual concentrations"))
```

```
, lty=1, col="black")  
  
dev.off()
```

```
## cairo_pdf  
##      2
```

1.4.2 PNG graphics devices

```
png("PK_of_Drug_X.png")  
  
plot(dta$TIME[dta$MDV==0], dta$DV[dta$MDV==0], main="PK of Drug X"  
      , type="n", xlab="Time (h)", ylab="Concentration (ng/ml)"  
      , ylim=range(0,80))  
points(dta$TIME[dta$MDV==0], dta$DV[dta$MDV==0], pch = 16, cex=0.8)  
lines(dta$TIME[dta$MDV==0], dta$DV[dta$MDV==0], col="black", lwd=1)  
abline(40, 0, col="red", lty=2) #abline(a,b): y=a+b*x  
legend("topright", legend=c("Individual concentrations")  
      , lty=1, col="black")  
  
dev.off()  
  
## cairo_pdf  
##      2
```



2

Data Import / Export

2017-03-29 배균섭 교수님 강의

이번 시간에는 자료를 불러오고 조작을 가한 뒤 저장하는 방법에 대해 알아보겠습니다.

2.1 Read.csv

```
setwd("D:/Rt")  
dir()  
mydata = read.csv("MyData2017.csv", as.is=TRUE)
```

2.2 Theoph 데이터

R에 기본적으로 들어있는 약동학 자료에 대해 살펴보겠습니다.

Theoph

```
##      Subject  Wt Dose  Time  conc
```

## 1	1	79.6	4.02	0.00	0.74
## 2	1	79.6	4.02	0.25	2.84
## 3	1	79.6	4.02	0.57	6.57
## 4	1	79.6	4.02	1.12	10.50
## 5	1	79.6	4.02	2.02	9.66
## 6	1	79.6	4.02	3.82	8.58
## 7	1	79.6	4.02	5.10	8.36
## 8	1	79.6	4.02	7.03	7.47
## 9	1	79.6	4.02	9.05	6.89
## 10	1	79.6	4.02	12.12	5.94
## 11	1	79.6	4.02	24.37	3.28
## 12	2	72.4	4.40	0.00	0.00
## 13	2	72.4	4.40	0.27	1.72
## 14	2	72.4	4.40	0.52	7.91
## 15	2	72.4	4.40	1.00	8.31
## 16	2	72.4	4.40	1.92	8.33
## 17	2	72.4	4.40	3.50	6.85
## 18	2	72.4	4.40	5.02	6.08
## 19	2	72.4	4.40	7.03	5.40
## 20	2	72.4	4.40	9.00	4.55
## 21	2	72.4	4.40	12.00	3.01
## 22	2	72.4	4.40	24.30	0.90
## 23	3	70.5	4.53	0.00	0.00
## 24	3	70.5	4.53	0.27	4.40
## 25	3	70.5	4.53	0.58	6.90
## 26	3	70.5	4.53	1.02	8.20
## 27	3	70.5	4.53	2.02	7.80
## 28	3	70.5	4.53	3.62	7.50
## 29	3	70.5	4.53	5.08	6.20
## 30	3	70.5	4.53	7.07	5.30
## 31	3	70.5	4.53	9.00	4.90
## 32	3	70.5	4.53	12.15	3.70
## 33	3	70.5	4.53	24.17	1.05
## 34	4	72.7	4.40	0.00	0.00
## 35	4	72.7	4.40	0.35	1.89
## 36	4	72.7	4.40	0.60	4.60
## 37	4	72.7	4.40	1.07	8.60
## 38	4	72.7	4.40	2.13	8.38
## 39	4	72.7	4.40	3.50	7.54
## 40	4	72.7	4.40	5.02	6.88

## 41	4	72.7	4.40	7.02	5.78
## 42	4	72.7	4.40	9.02	5.33
## 43	4	72.7	4.40	11.98	4.19
## 44	4	72.7	4.40	24.65	1.15
## 45	5	54.6	5.86	0.00	0.00
## 46	5	54.6	5.86	0.30	2.02
## 47	5	54.6	5.86	0.52	5.63
## 48	5	54.6	5.86	1.00	11.40
## 49	5	54.6	5.86	2.02	9.33
## 50	5	54.6	5.86	3.50	8.74
## 51	5	54.6	5.86	5.02	7.56
## 52	5	54.6	5.86	7.02	7.09
## 53	5	54.6	5.86	9.10	5.90
## 54	5	54.6	5.86	12.00	4.37
## 55	5	54.6	5.86	24.35	1.57
## 56	6	80.0	4.00	0.00	0.00
## 57	6	80.0	4.00	0.27	1.29
## 58	6	80.0	4.00	0.58	3.08
## 59	6	80.0	4.00	1.15	6.44
## 60	6	80.0	4.00	2.03	6.32
## 61	6	80.0	4.00	3.57	5.53
## 62	6	80.0	4.00	5.00	4.94
## 63	6	80.0	4.00	7.00	4.02
## 64	6	80.0	4.00	9.22	3.46
## 65	6	80.0	4.00	12.10	2.78
## 66	6	80.0	4.00	23.85	0.92
## 67	7	64.6	4.95	0.00	0.15
## 68	7	64.6	4.95	0.25	0.85
## 69	7	64.6	4.95	0.50	2.35
## 70	7	64.6	4.95	1.02	5.02
## 71	7	64.6	4.95	2.02	6.58
## 72	7	64.6	4.95	3.48	7.09
## 73	7	64.6	4.95	5.00	6.66
## 74	7	64.6	4.95	6.98	5.25
## 75	7	64.6	4.95	9.00	4.39
## 76	7	64.6	4.95	12.05	3.53
## 77	7	64.6	4.95	24.22	1.15
## 78	8	70.5	4.53	0.00	0.00
## 79	8	70.5	4.53	0.25	3.05
## 80	8	70.5	4.53	0.52	3.05

## 81	8	70.5	4.53	0.98	7.31
## 82	8	70.5	4.53	2.02	7.56
## 83	8	70.5	4.53	3.53	6.59
## 84	8	70.5	4.53	5.05	5.88
## 85	8	70.5	4.53	7.15	4.73
## 86	8	70.5	4.53	9.07	4.57
## 87	8	70.5	4.53	12.10	3.00
## 88	8	70.5	4.53	24.12	1.25
## 89	9	86.4	3.10	0.00	0.00
## 90	9	86.4	3.10	0.30	7.37
## 91	9	86.4	3.10	0.63	9.03
## 92	9	86.4	3.10	1.05	7.14
## 93	9	86.4	3.10	2.02	6.33
## 94	9	86.4	3.10	3.53	5.66
## 95	9	86.4	3.10	5.02	5.67
## 96	9	86.4	3.10	7.17	4.24
## 97	9	86.4	3.10	8.80	4.11
## 98	9	86.4	3.10	11.60	3.16
## 99	9	86.4	3.10	24.43	1.12
## 100	10	58.2	5.50	0.00	0.24
## 101	10	58.2	5.50	0.37	2.89
## 102	10	58.2	5.50	0.77	5.22
## 103	10	58.2	5.50	1.02	6.41
## 104	10	58.2	5.50	2.05	7.83
## 105	10	58.2	5.50	3.55	10.21
## 106	10	58.2	5.50	5.05	9.18
## 107	10	58.2	5.50	7.08	8.02
## 108	10	58.2	5.50	9.38	7.14
## 109	10	58.2	5.50	12.10	5.68
## 110	10	58.2	5.50	23.70	2.42
## 111	11	65.0	4.92	0.00	0.00
## 112	11	65.0	4.92	0.25	4.86
## 113	11	65.0	4.92	0.50	7.24
## 114	11	65.0	4.92	0.98	8.00
## 115	11	65.0	4.92	1.98	6.81
## 116	11	65.0	4.92	3.60	5.87
## 117	11	65.0	4.92	5.02	5.22
## 118	11	65.0	4.92	7.03	4.45
## 119	11	65.0	4.92	9.03	3.62
## 120	11	65.0	4.92	12.12	2.69

```
## 121      11 65.0 4.92 24.08 0.86
## 122      12 60.5 5.30  0.00 0.00
## 123      12 60.5 5.30  0.25 1.25
## 124      12 60.5 5.30  0.50 3.96
## 125      12 60.5 5.30  1.00 7.82
## 126      12 60.5 5.30  2.00 9.72
## 127      12 60.5 5.30  3.52 9.75
## 128      12 60.5 5.30  5.07 8.57
## 129      12 60.5 5.30  7.07 6.59
## 130      12 60.5 5.30  9.03 6.11
## 131      12 60.5 5.30 12.05 4.57
## 132      12 60.5 5.30 24.15 1.17
```


R console에서 ?Theoph를 타이핑 치면 좀 더 자세한 정보를 얻을 수 있습니다.

2.3 *lattice*


lattice 패키지를 불러온 뒤 그림을 그려보겠습니다. (?)

```
library(lattice) # trellis

xyplot(conc ~ Time | Subject, data=Theoph)
```

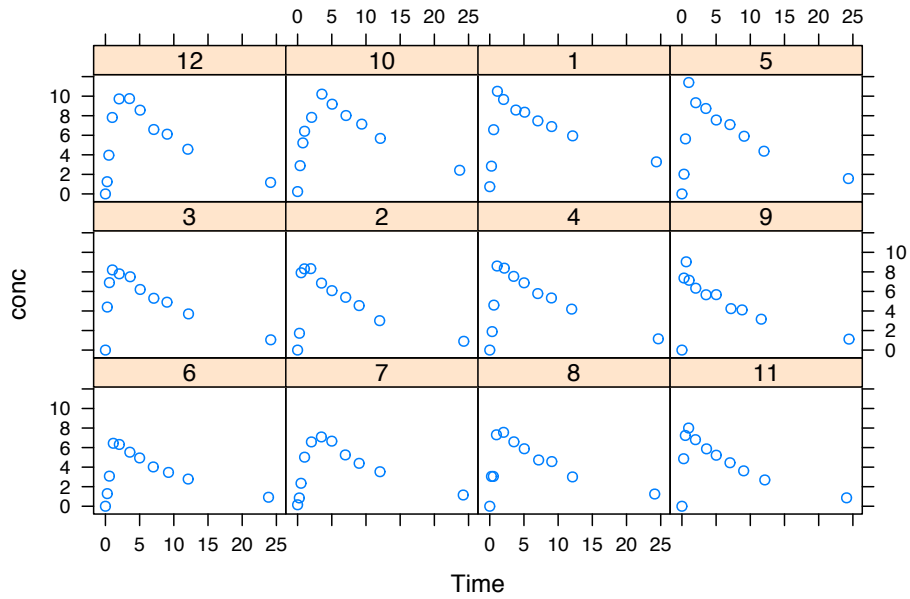


```
xyplot(conc ~ Time | Subject, data=Theoph, type="b")
```

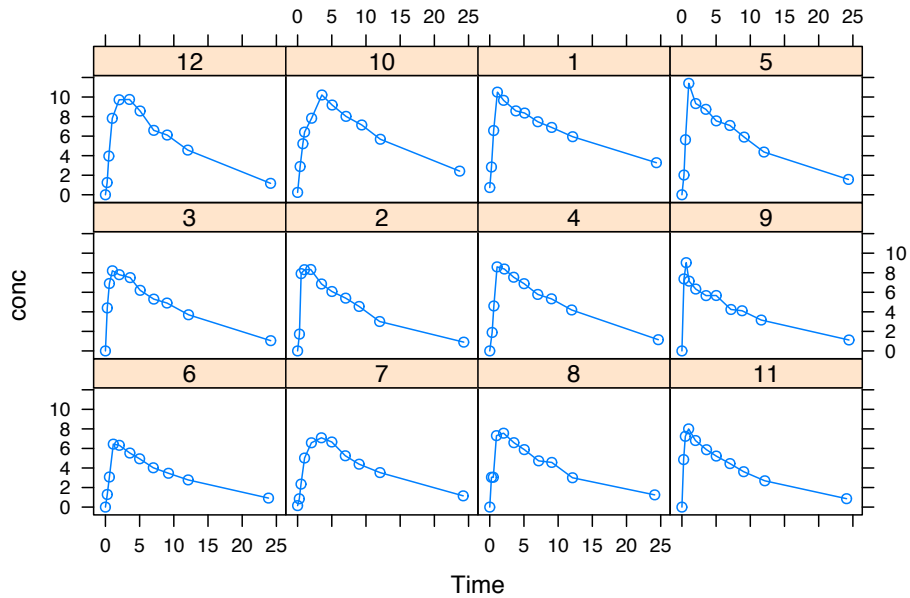


```
Theoph[, "ID"] = as.numeric(as.character(Theoph[, "Subject"]))
```

```
xyplot(conc ~ Time | ID, data=Theoph, type="b")
```

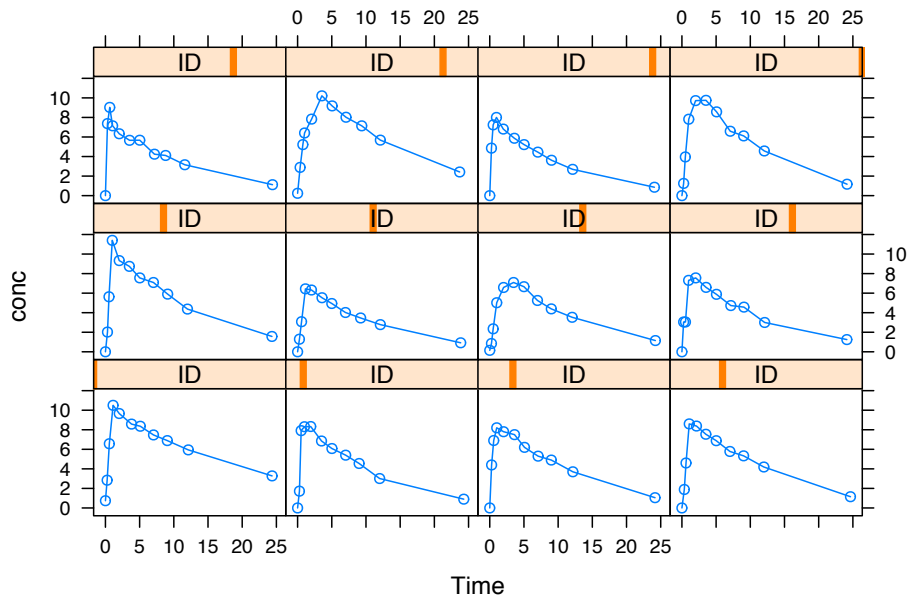

```
xyplot(conc ~ Time | as.factor(ID), data=Theoph, type="b")
```

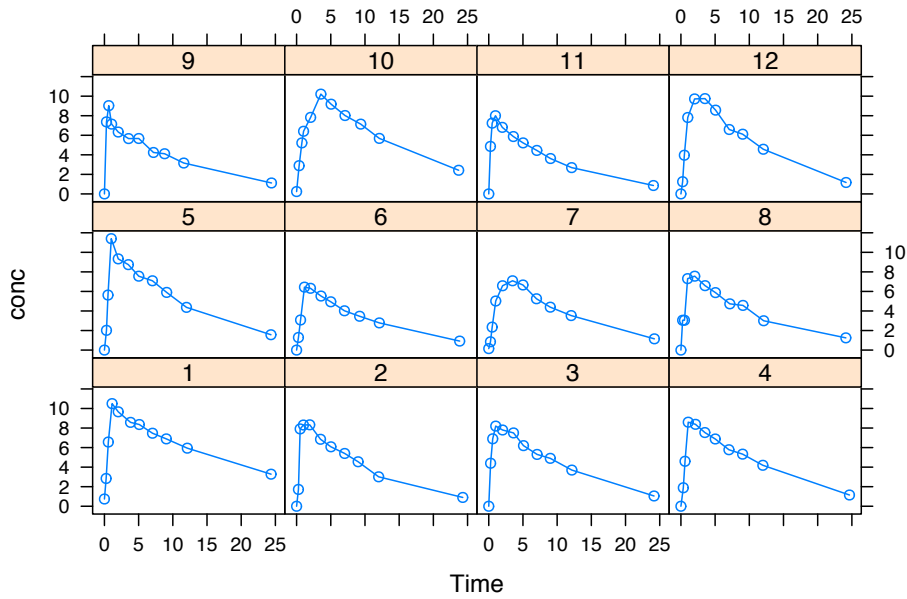

```
write.csv(Theoph, "Theoph.csv", row.names=FALSE, quote=FALSE, na="")
```

2.4 Subsetting and write.csv

자료를 편집하고, subset을 만들고 각각을 파일로 저장하는 방법에 대해 알아보겠습니다.

```
IDs = sort(unique(Theoph[, "ID"])) ; IDs
```

```
## [1] 1 2 3 4 5 6 7 8 9 10 11 12
```

```
nID = length(IDs) ; nID
```

```
## [1] 12
```

```
demog = unique(Theoph[, c("ID", "Wt")])
colnames(demog) = c("ID", "BWT")
```

```

write.csv(demog, "1-demog.csv", row.names=FALSE, quote=FALSE, na="")

DV = Theoph[,c("ID", "Time", "conc")]
colnames(DV) = c("ID", "TIME", "DV")
write.csv(DV, "3-DV.csv", row.names=FALSE, quote=FALSE, na="")

adm = cbind(IDs, rep(0, nID), rep(320, nID))
colnames(adm) = c("ID", "TIME", "AMT")
write.csv(adm, "2-adm.csv", row.names=FALSE, quote=FALSE, na="")

demog = read.csv("1-demog.csv", as.is=TRUE)
adm = read.csv("2-adm.csv", as.is=TRUE)
dv = read.csv("3-dv.csv", as.is=TRUE)

AdmDv = merge(adm, dv, by=intersect(colnames(adm), colnames(dv)), all=TRUE)
AdmDv

```

##	ID	TIME	AMT	DV
## 1	1	0.00	320	0.74
## 2	1	0.25	NA	2.84
## 3	1	0.57	NA	6.57
## 4	1	1.12	NA	10.50
## 5	1	2.02	NA	9.66
## 6	1	3.82	NA	8.58
## 7	1	5.10	NA	8.36
## 8	1	7.03	NA	7.47
## 9	1	9.05	NA	6.89
## 10	1	12.12	NA	5.94
## 11	1	24.37	NA	3.28
## 12	2	0.00	320	0.00
## 13	2	0.27	NA	1.72
## 14	2	0.52	NA	7.91
## 15	2	1.00	NA	8.31
## 16	2	1.92	NA	8.33
## 17	2	3.50	NA	6.85
## 18	2	5.02	NA	6.08
## 19	2	7.03	NA	5.40
## 20	2	9.00	NA	4.55
## 21	2	12.00	NA	3.01

##	22	2	24.30	NA	0.90
##	23	3	0.00	320	0.00
##	24	3	0.27	NA	4.40
##	25	3	0.58	NA	6.90
##	26	3	1.02	NA	8.20
##	27	3	2.02	NA	7.80
##	28	3	3.62	NA	7.50
##	29	3	5.08	NA	6.20
##	30	3	7.07	NA	5.30
##	31	3	9.00	NA	4.90
##	32	3	12.15	NA	3.70
##	33	3	24.17	NA	1.05
##	34	4	0.00	320	0.00
##	35	4	0.35	NA	1.89
##	36	4	0.60	NA	4.60
##	37	4	1.07	NA	8.60
##	38	4	2.13	NA	8.38
##	39	4	3.50	NA	7.54
##	40	4	5.02	NA	6.88
##	41	4	7.02	NA	5.78
##	42	4	9.02	NA	5.33
##	43	4	11.98	NA	4.19
##	44	4	24.65	NA	1.15
##	45	5	0.00	320	0.00
##	46	5	0.30	NA	2.02
##	47	5	0.52	NA	5.63
##	48	5	1.00	NA	11.40
##	49	5	2.02	NA	9.33
##	50	5	3.50	NA	8.74
##	51	5	5.02	NA	7.56
##	52	5	7.02	NA	7.09
##	53	5	9.10	NA	5.90
##	54	5	12.00	NA	4.37
##	55	5	24.35	NA	1.57
##	56	6	0.00	320	0.00
##	57	6	0.27	NA	1.29
##	58	6	0.58	NA	3.08
##	59	6	1.15	NA	6.44
##	60	6	2.03	NA	6.32
##	61	6	3.57	NA	5.53


```
## 62  6  5.00  NA  4.94
## 63  6  7.00  NA  4.02
## 64  6  9.22  NA  3.46
## 65  6 12.10  NA  2.78
## 66  6 23.85  NA  0.92
## 67  7  0.00 320  0.15
## 68  7  0.25  NA  0.85
## 69  7  0.50  NA  2.35
## 70  7  1.02  NA  5.02
## 71  7  2.02  NA  6.58
## 72  7  3.48  NA  7.09
## 73  7  5.00  NA  6.66
## 74  7  6.98  NA  5.25
## 75  7  9.00  NA  4.39
## 76  7 12.05  NA  3.53
## 77  7 24.22  NA  1.15
## 78  8  0.00 320  0.00
## 79  8  0.25  NA  3.05
## 80  8  0.52  NA  3.05
## 81  8  0.98  NA  7.31
## 82  8  2.02  NA  7.56
## 83  8  3.53  NA  6.59
## 84  8  5.05  NA  5.88
## 85  8  7.15  NA  4.73
## 86  8  9.07  NA  4.57
## 87  8 12.10  NA  3.00
## 88  8 24.12  NA  1.25
## 89  9  0.00 320  0.00
## 90  9  0.30  NA  7.37
## 91  9  0.63  NA  9.03
## 92  9  1.05  NA  7.14
## 93  9  2.02  NA  6.33
## 94  9  3.53  NA  5.66
## 95  9  5.02  NA  5.67
## 96  9  7.17  NA  4.24
## 97  9  8.80  NA  4.11
## 98  9 11.60  NA  3.16
## 99  9 24.43  NA  1.12
## 100 10  0.00 320  0.24
## 101 10  0.37  NA  2.89
```

```
## 102 10 0.77 NA 5.22
## 103 10 1.02 NA 6.41
## 104 10 2.05 NA 7.83
## 105 10 3.55 NA 10.21
## 106 10 5.05 NA 9.18
## 107 10 7.08 NA 8.02
## 108 10 9.38 NA 7.14
## 109 10 12.10 NA 5.68
## 110 10 23.70 NA 2.42
## 111 11 0.00 320 0.00
## 112 11 0.25 NA 4.86
## 113 11 0.50 NA 7.24
## 114 11 0.98 NA 8.00
## 115 11 1.98 NA 6.81
## 116 11 3.60 NA 5.87
## 117 11 5.02 NA 5.22
## 118 11 7.03 NA 4.45
## 119 11 9.03 NA 3.62
## 120 11 12.12 NA 2.69
## 121 11 24.08 NA 0.86
## 122 12 0.00 320 0.00
## 123 12 0.25 NA 1.25
## 124 12 0.50 NA 3.96
## 125 12 1.00 NA 7.82
## 126 12 2.00 NA 9.72
## 127 12 3.52 NA 9.75
## 128 12 5.07 NA 8.57
## 129 12 7.07 NA 6.59
## 130 12 9.03 NA 6.11
## 131 12 12.05 NA 4.57
## 132 12 24.15 NA 1.17
```

자료를 병합(merge)해 보겠습니다.

```
DataAll = merge(demog, AdmDv, by=c("ID"), all=TRUE)
DataAll
```

```
##      ID  BWT  TIME AMT   DV
## 1     1  79.6  0.00 320  0.74
## 2     1  79.6  0.25  NA  2.84
```

```
## 3    1 79.6  0.57 NA  6.57
## 4    1 79.6  1.12 NA 10.50
## 5    1 79.6  2.02 NA  9.66
## 6    1 79.6  3.82 NA  8.58
## 7    1 79.6  5.10 NA  8.36
## 8    1 79.6  7.03 NA  7.47
## 9    1 79.6  9.05 NA  6.89
## 10   1 79.6 12.12 NA  5.94
## 11   1 79.6 24.37 NA  3.28
## 12   2 72.4  0.00 320  0.00
## 13   2 72.4  0.27 NA  1.72
## 14   2 72.4  0.52 NA  7.91
## 15   2 72.4  1.00 NA  8.31
## 16   2 72.4  1.92 NA  8.33
## 17   2 72.4  3.50 NA  6.85
## 18   2 72.4  5.02 NA  6.08
## 19   2 72.4  7.03 NA  5.40
## 20   2 72.4  9.00 NA  4.55
## 21   2 72.4 12.00 NA  3.01
## 22   2 72.4 24.30 NA  0.90
## 23   3 70.5  0.00 320  0.00
## 24   3 70.5  0.27 NA  4.40
## 25   3 70.5  0.58 NA  6.90
## 26   3 70.5  1.02 NA  8.20
## 27   3 70.5  2.02 NA  7.80
## 28   3 70.5  3.62 NA  7.50
## 29   3 70.5  5.08 NA  6.20
## 30   3 70.5  7.07 NA  5.30
## 31   3 70.5  9.00 NA  4.90
## 32   3 70.5 12.15 NA  3.70
## 33   3 70.5 24.17 NA  1.05
## 34   4 72.7  0.00 320  0.00
## 35   4 72.7  0.35 NA  1.89
## 36   4 72.7  0.60 NA  4.60
## 37   4 72.7  1.07 NA  8.60
## 38   4 72.7  2.13 NA  8.38
## 39   4 72.7  3.50 NA  7.54
## 40   4 72.7  5.02 NA  6.88
## 41   4 72.7  7.02 NA  5.78
## 42   4 72.7  9.02 NA  5.33
```

```
## 43  4 72.7 11.98  NA  4.19
## 44  4 72.7 24.65  NA  1.15
## 45  5 54.6  0.00 320  0.00
## 46  5 54.6  0.30  NA  2.02
## 47  5 54.6  0.52  NA  5.63
## 48  5 54.6  1.00  NA 11.40
## 49  5 54.6  2.02  NA  9.33
## 50  5 54.6  3.50  NA  8.74
## 51  5 54.6  5.02  NA  7.56
## 52  5 54.6  7.02  NA  7.09
## 53  5 54.6  9.10  NA  5.90
## 54  5 54.6 12.00  NA  4.37
## 55  5 54.6 24.35  NA  1.57
## 56  6 80.0  0.00 320  0.00
## 57  6 80.0  0.27  NA  1.29
## 58  6 80.0  0.58  NA  3.08
## 59  6 80.0  1.15  NA  6.44
## 60  6 80.0  2.03  NA  6.32
## 61  6 80.0  3.57  NA  5.53
## 62  6 80.0  5.00  NA  4.94
## 63  6 80.0  7.00  NA  4.02
## 64  6 80.0  9.22  NA  3.46
## 65  6 80.0 12.10  NA  2.78
## 66  6 80.0 23.85  NA  0.92
## 67  7 64.6  0.00 320  0.15
## 68  7 64.6  0.25  NA  0.85
## 69  7 64.6  0.50  NA  2.35
## 70  7 64.6  1.02  NA  5.02
## 71  7 64.6  2.02  NA  6.58
## 72  7 64.6  3.48  NA  7.09
## 73  7 64.6  5.00  NA  6.66
## 74  7 64.6  6.98  NA  5.25
## 75  7 64.6  9.00  NA  4.39
## 76  7 64.6 12.05  NA  3.53
## 77  7 64.6 24.22  NA  1.15
## 78  8 70.5  0.00 320  0.00
## 79  8 70.5  0.25  NA  3.05
## 80  8 70.5  0.52  NA  3.05
## 81  8 70.5  0.98  NA  7.31
## 82  8 70.5  2.02  NA  7.56
```

```
## 83 8 70.5 3.53 NA 6.59
## 84 8 70.5 5.05 NA 5.88
## 85 8 70.5 7.15 NA 4.73
## 86 8 70.5 9.07 NA 4.57
## 87 8 70.5 12.10 NA 3.00
## 88 8 70.5 24.12 NA 1.25
## 89 9 86.4 0.00 320 0.00
## 90 9 86.4 0.30 NA 7.37
## 91 9 86.4 0.63 NA 9.03
## 92 9 86.4 1.05 NA 7.14
## 93 9 86.4 2.02 NA 6.33
## 94 9 86.4 3.53 NA 5.66
## 95 9 86.4 5.02 NA 5.67
## 96 9 86.4 7.17 NA 4.24
## 97 9 86.4 8.80 NA 4.11
## 98 9 86.4 11.60 NA 3.16
## 99 9 86.4 24.43 NA 1.12
## 100 10 58.2 0.00 320 0.24
## 101 10 58.2 0.37 NA 2.89
## 102 10 58.2 0.77 NA 5.22
## 103 10 58.2 1.02 NA 6.41
## 104 10 58.2 2.05 NA 7.83
## 105 10 58.2 3.55 NA 10.21
## 106 10 58.2 5.05 NA 9.18
## 107 10 58.2 7.08 NA 8.02
## 108 10 58.2 9.38 NA 7.14
## 109 10 58.2 12.10 NA 5.68
## 110 10 58.2 23.70 NA 2.42
## 111 11 65.0 0.00 320 0.00
## 112 11 65.0 0.25 NA 4.86
## 113 11 65.0 0.50 NA 7.24
## 114 11 65.0 0.98 NA 8.00
## 115 11 65.0 1.98 NA 6.81
## 116 11 65.0 3.60 NA 5.87
## 117 11 65.0 5.02 NA 5.22
## 118 11 65.0 7.03 NA 4.45
## 119 11 65.0 9.03 NA 3.62
## 120 11 65.0 12.12 NA 2.69
## 121 11 65.0 24.08 NA 0.86
## 122 12 60.5 0.00 320 0.00
```

```
## 123 12 60.5 0.25 NA 1.25
## 124 12 60.5 0.50 NA 3.96
## 125 12 60.5 1.00 NA 7.82
## 126 12 60.5 2.00 NA 9.72
## 127 12 60.5 3.52 NA 9.75
## 128 12 60.5 5.07 NA 8.57
## 129 12 60.5 7.07 NA 6.59
## 130 12 60.5 9.03 NA 6.11
## 131 12 60.5 12.05 NA 4.57
## 132 12 60.5 24.15 NA 1.17
```

3

Frequently Used Functions

2017-04-05 배균섭 교수님 강의

자주 쓰는 함수 및 명령어에 대해 알아보겠습니다.

3.1 The basics

TABLE 3.1: The basics - The first functions to learn

Keyword	Bae Freq	Essential	Comment
?	H	Y	
str	M	Y	strcutre

TABLE 3.2: The basics - Important operators and assignment

Keyword	Bae Freq	Essential	Comment
%in%	M	Y	Value Matching
match	M	N	Value Matching
=	H	Y	
<-	L	N	
«-	M	Y	
head	H	N	

tail	M	N	
subset	L	N	Subsetting Vectors, Matrices and Data Frames
with	L	N	Evaluate an Expression in a Data Environment
assign	L	N	Assign a Value to a Name
get	L	N	Return the Value of a Named Object

TABLE 3.3: The basics - Comparison

Keyword	Bae Freq	Essential	Comment
all.equal	L	N	Test if Two Objects are (Nearly) Equal
identical	L	N	Test Objects for Exact Equality
!=, ==, >, >=, <, <=	H	Y	Comparison Operator
is.na	H	Y	
complete.cases	L	N	Find Complete Cases
is.finite	M	Y	

TABLE 3.4: The basics - Basic math

Keyword	Bae Freq	Essential	Comment
*, +, -, /, ^	H	Y	Math operator
%%	M	Y	Modulus
%%/	L	N	Integer division
abs	H	Y	
sign	M	N	
acos	L	Y	
asin	L	Y	
atan	L	Y	
atan2	L	Y	
sin	L	Y	
cos	L	Y	
tan	L	Y	
ceiling	H	Y	
floor	H	N	
round	H	Y	
trunc	H	N	
signif	M	Y	rounds the values in its first argument to the specified number of significant d

exp	H	Y	
log	H	Y	
log10	L	Y	
log2	L	Y	
sqrt	H	N	
max	H	Y	
min	H	Y	
prod	L	N	
sum	H	Y	
cummax	L	N	
cummin	L	N	
cumprod	L	N	
cumsum	L	N	
diff	L	N	
pmax	L	N	pairwise max
pmin	L	N	pairwise min
range	L	N	
mean	H	Y	
median	H	Y	
cor	H	Y	
sd	H	Y	
var	H	Y	
rle	L	N	Run Length Encoding

TABLE 3.5: The basics - Functions to do with functions

Keyword	Bae Freq	Essential	Comment
function	H	Y	
missing	M	Y	Does a Formal Argument have a Value?
on.exit	L	Y	
return	H	N	
invisible	L	N	Change the Print Mode to Invisible

TABLE 3.6: The basics - Logical - sets

Keyword	Bae Freq	Essential	Comment
---------	----------	-----------	---------

&, , !	H	Y	
xor	L	Y	
all	L	Y	Are All Values True?
any	L	Y	Are Some Values True?
intersect	M	Y	
union	M	Y	
setdiff	L	Y	
setequal	L	Y	
which	L	N	Which indices are TRUE?

TABLE 3.7: The basics - Vectors and matrices

Keyword	Bae Freq	Essential	Comment
c	H	Y	
matrix	H	Y	
# automatic coercion rules character > numeric > logical	H	Y	
length	H	Y	
dim	H	Y	
ncol	H	N	
nrow	H	N	
cbind	H	Y	
rbind	H	Y	
names	M	Y	
colnames	H	Y	
rownames	M	Y	
t	H	Y	
diag	H	Y	
sweep	L	N	Sweep out Array Summaries
as.matrix	H	Y	
data.matrix	L	N	Convert a Data Frame to a Num

TABLE 3.8: The basics - Making vectors

Keyword	Bae Freq	Essential	Comment
c	H	Y	
rep	H	Y	

rep_len	L	N	Replicate Elements of Vectors and Lists with length
seq	M	Y	
seq_len	L	N	
seq_along	L	N	
rev	M	Y	
sample	H	Y	
choose	H	Y	
factorial	M	Y	
combn	L	N	Generate All Combinations of n Elements, Taken m
(is/as).(character/numeric/logical/...)	H	Y	

TABLE 3.9: The basics - Lists - data.frames

Keyword	Bae Freq	Essential	Comment
list	H	Y	
unlist	L	Y	Flatten Lists
data.frame	H	Y	
as.data.frame	H	Y	
split	H	Y	
expand.grid	L	N	Create a Data Frame from All Combinations of Factor Variables

TABLE 3.10: The basics - Control flow

Keyword	Bae Freq	Essential	Comment
if	H	Y	
&&	L	Y	
(short circuiting)	L	Y	
for	H	Y	
while	L	N	
next	M	Y	
break	M	Y	
switch	L	Y	
ifelse	L	N	Conditional Element Selection

TABLE 3.11: The basics - Apply - friends

Keyword	Bae Freq	Essential	Comment
lapply	L	N	Apply a Function over a List or Vector
sapply	L	N	user-friendly version and wrapper of lapply
vapply	L	N	similar to sapply, but has a pre-specified type of return value
apply	M	N	Apply Functions Over Array Margins
tapply	L	N	Apply a Function Over a Ragged Array
replicate	L	N	Apply a Function over a List or Vector

3.2 Common data structures

TABLE 3.12: Common data structures - Date time

Keyword	Bae Freq	Essential	Comment
ISOdate	L	N	
ISOdatetime	L	N	
strftime	H	Y	Date-time Conversion Functions to and from Character
strptime	H	Y	
date	M	Y	
difftime	H	Y	
julian	L	Y	Extract Parts of a POSIXt or Date Object
months	L	N	Extract Parts of a POSIXt or Date Object
quarters	L	N	Extract Parts of a POSIXt or Date Object
weekdays	L	N	Extract Parts of a POSIXt or Date Object
library(lubridate)	L	N	

TABLE 3.13: Common data structures - Character manipulation

Keyword	Bae Freq	Essential	Comment
grep	H	Y	Pattern Matching and Replacement
agrep	L	N	Approximate String Matching (Fuzzy Matching)
gsub	M	Y	or use sub
strsplit	H	Y	
chartr	L	N	Character Translation and Casefolding

nchar	M	Y
tolower	M	Y
toupper	H	Y
substr	H	Y
paste	H	Y
library(stringr)	L	N

TABLE 3.14: Common data structures - Factors

Keyword	Bae Freq	Essential	Comment
factor	M	Y	
levels	M	Y	
nlevels	L	N	
reorder	L	N	Reorder Levels of a Factor
relevel	L	N	Reorder Levels of Factor
cut	L	Y	
findInterval	L	N	Find Interval Numbers or Indices
interaction	L	N	Compute Factor Interactions
options(stringsAsFactors = FALSE)	L	N	

TABLE 3.15: Common data structures - Array manipulation

Keyword	Bae Freq	Essential	Comment
array	L	N	Multi-way Arrays
dim	H	Y	
dimnames	M	Y	
aperm	L	N	Array Transposition
library(abind)	L	N	

3.3 Statistics

TABLE 3.16: Statistics - Ordering and tabulating

Keyword	Bae Freq	Essential	Comment
---------	----------	-----------	---------

duplicated	L	Y	Determine Duplicated Elements
unique	H	Y	
merge	L	N	
order	H	Y	
rank	L	Y	
quantile	L	Y	Flat Contingency Tables
sort	H	Y	
table	M	Y	
fable	L	Y	

TABLE 3.17: Statistics - Linear models

Keyword	Bae Freq	Essential	Comment
fitted	L	Y	Extract Model Fitted Values
predict	H	Y	
resid	L	Y	Extract Model Residuals
rstandard	L	Y	
lm	H	Y	
glm	H	Y	Regression Deletion Diagnostics
hat	L	Y	
influence.measures	M	Y	
logLik	L	Y	
df	M	Y	
deviance	M	Y	
formula	H	Y	
~	H	Y	
I	H	Y	
anova	H	Y	
coef	M	Y	
confint	M	Y	Get and Set Contrast Matrices
vcov	H	Y	
contrasts	L	Y	

TABLE 3.18: Statistics - Miscellaneous tests

Keyword	Bae Freq	Essential	Comment
---------	----------	-----------	---------